

8. The screen should look like the picture below. Press "Exit" to resume watching TV.



9. If at any time you feel like you are not in the correct menu or have pressed an incorrect key, Press "Exit" several times to return the TV to normal and start over with step 2.

**\* This feature can be turned off at anytime by following these instructions.**

## Caller ID Setup Instructions For Skitter TV



**RELYANTCOMMUNICATIONS.COM**  
**706-678-2121**

1. Power Cycle the Skitter Box by unplugging the power cord and then plugging it back in. Wait for the box to reboot and then make sure the Skitter box and TV are on and playing.


2. Locate the Skitter Remote (identified on the bottom as Amino or Entone) and press the STB button on top of remote.




7. Press "Down Arrow" to Highlight "Apply" and then Press "OK"



6. Press "OK" and a "Check Mark" appears by "Phone"

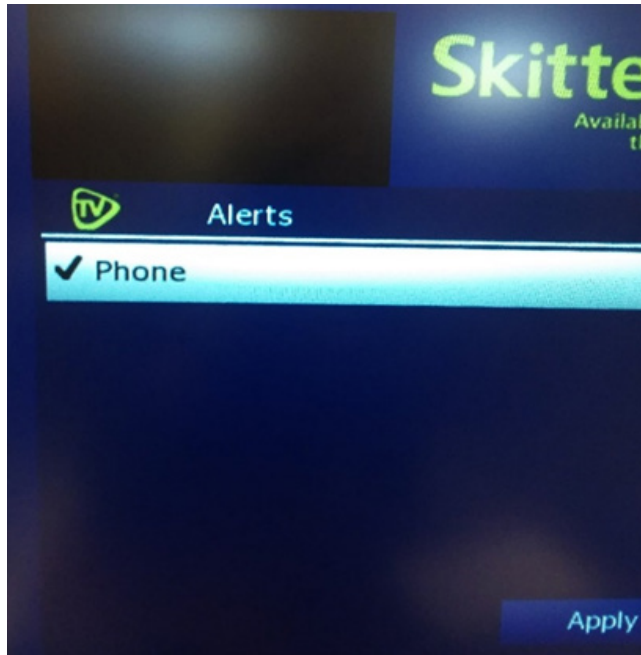

3. Using the Skitter Remote (identified on the bottom as Amino or Entone), Press "Menu" the screen should look like the picture below.

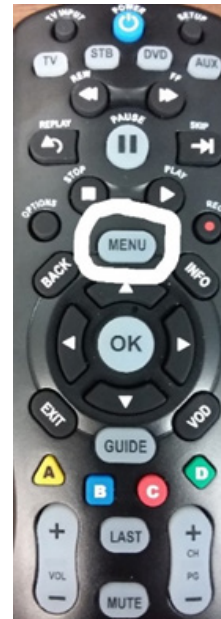

4. Press the "Down Arrow" 5 times to Highlight "Alerts" and then Press "OK"



5. The screen should look like the picture below.

